



123K00

Illustrated Parts List

Model Series

123K00

TYPE NUMBERS
0005 through 3717.

TABLE OF CONTENTS

Alternator	6
Air Cleaner	4
Blower Housing/Shrouds	5
Camshaft	2
Carburetor	3
Controls	4
Crankshaft	2
Cylinder	2
Electric Starter	6
Electrical	6
Engine Sump	2
Exhaust System	4
Flywheel	6
Flywheel Brake	6
Fuel Supply	4
Governor Spring	4
Ignition	6
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	6
Valves	2

BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.






1058 OPERATOR'S MANUAL








1330 REPAIR MANUAL






1019 LABEL KIT

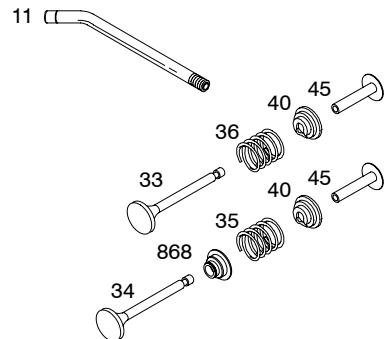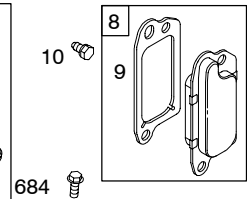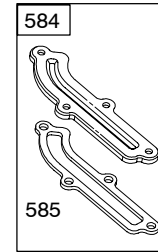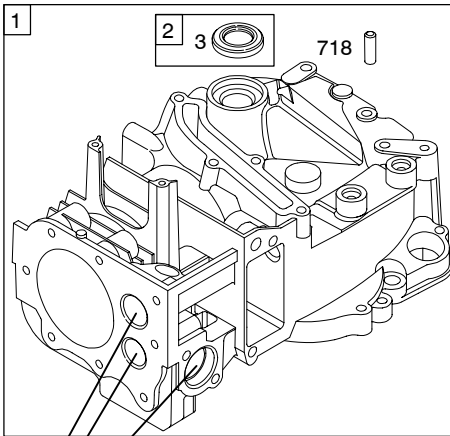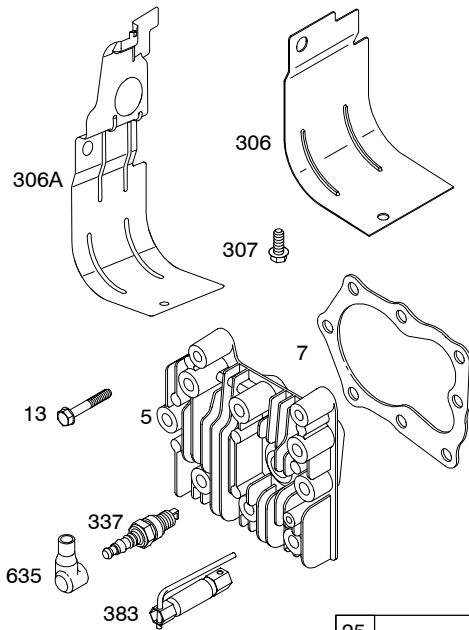






1095 VALVE GASKET SET

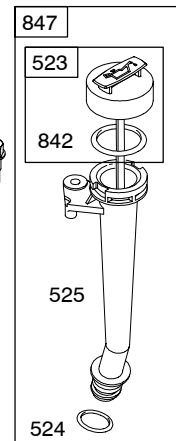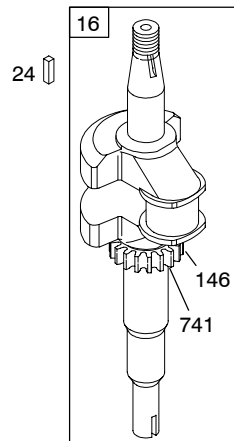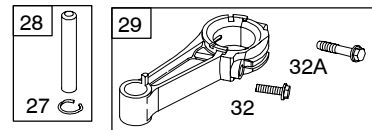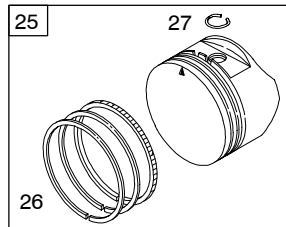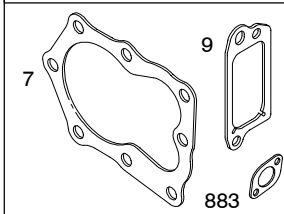


358 ENGINE GASKET SET

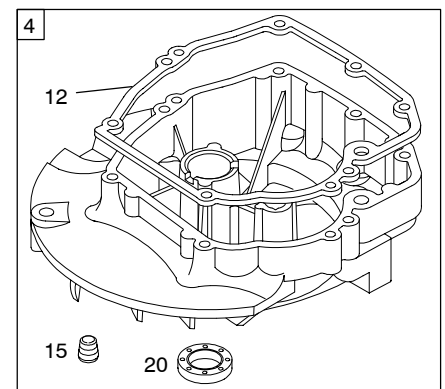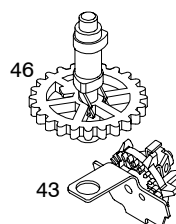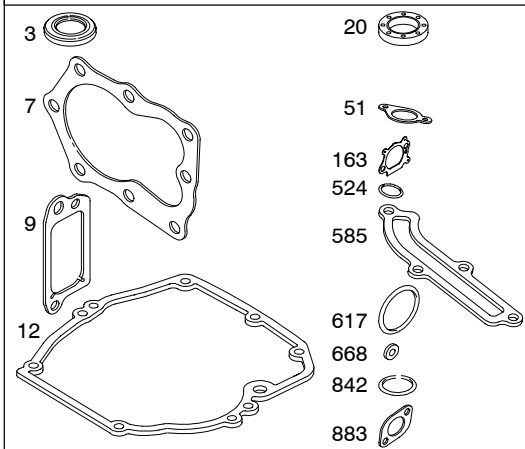


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

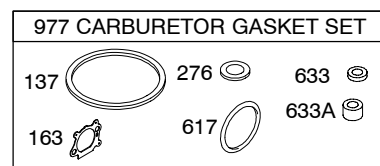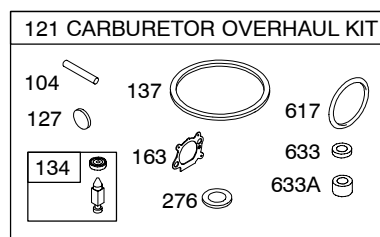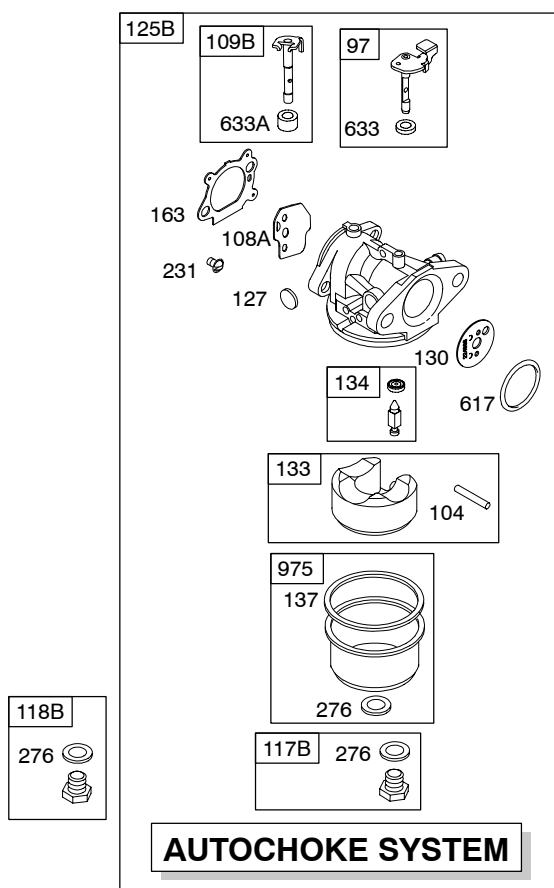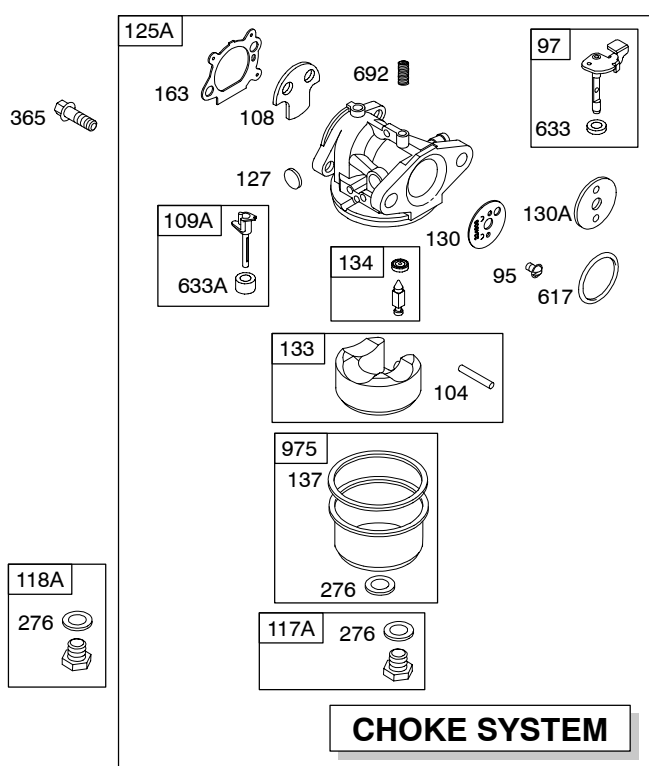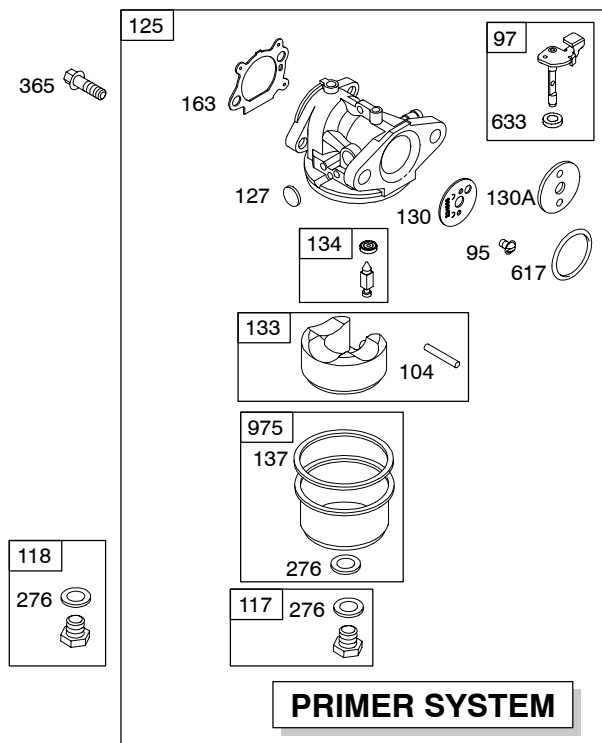


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

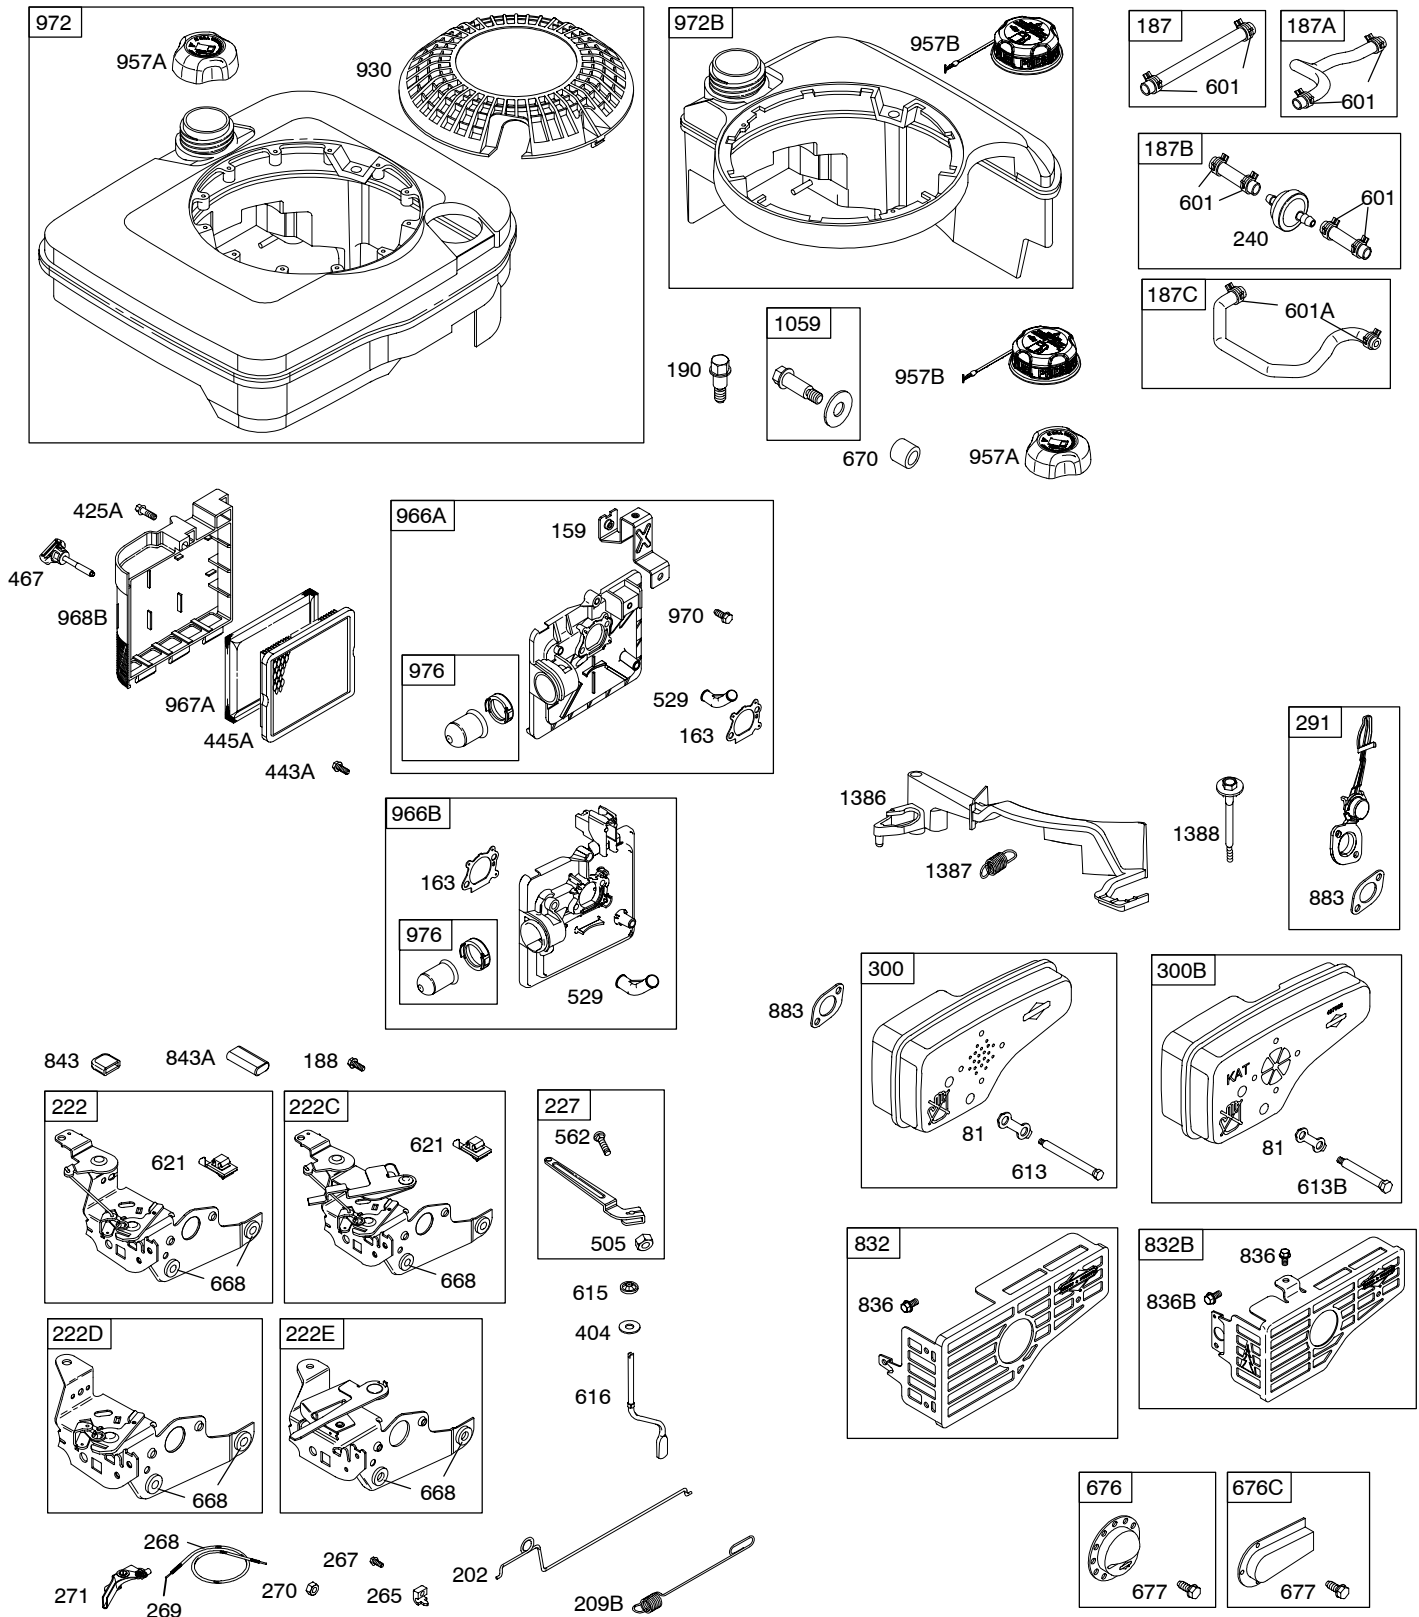

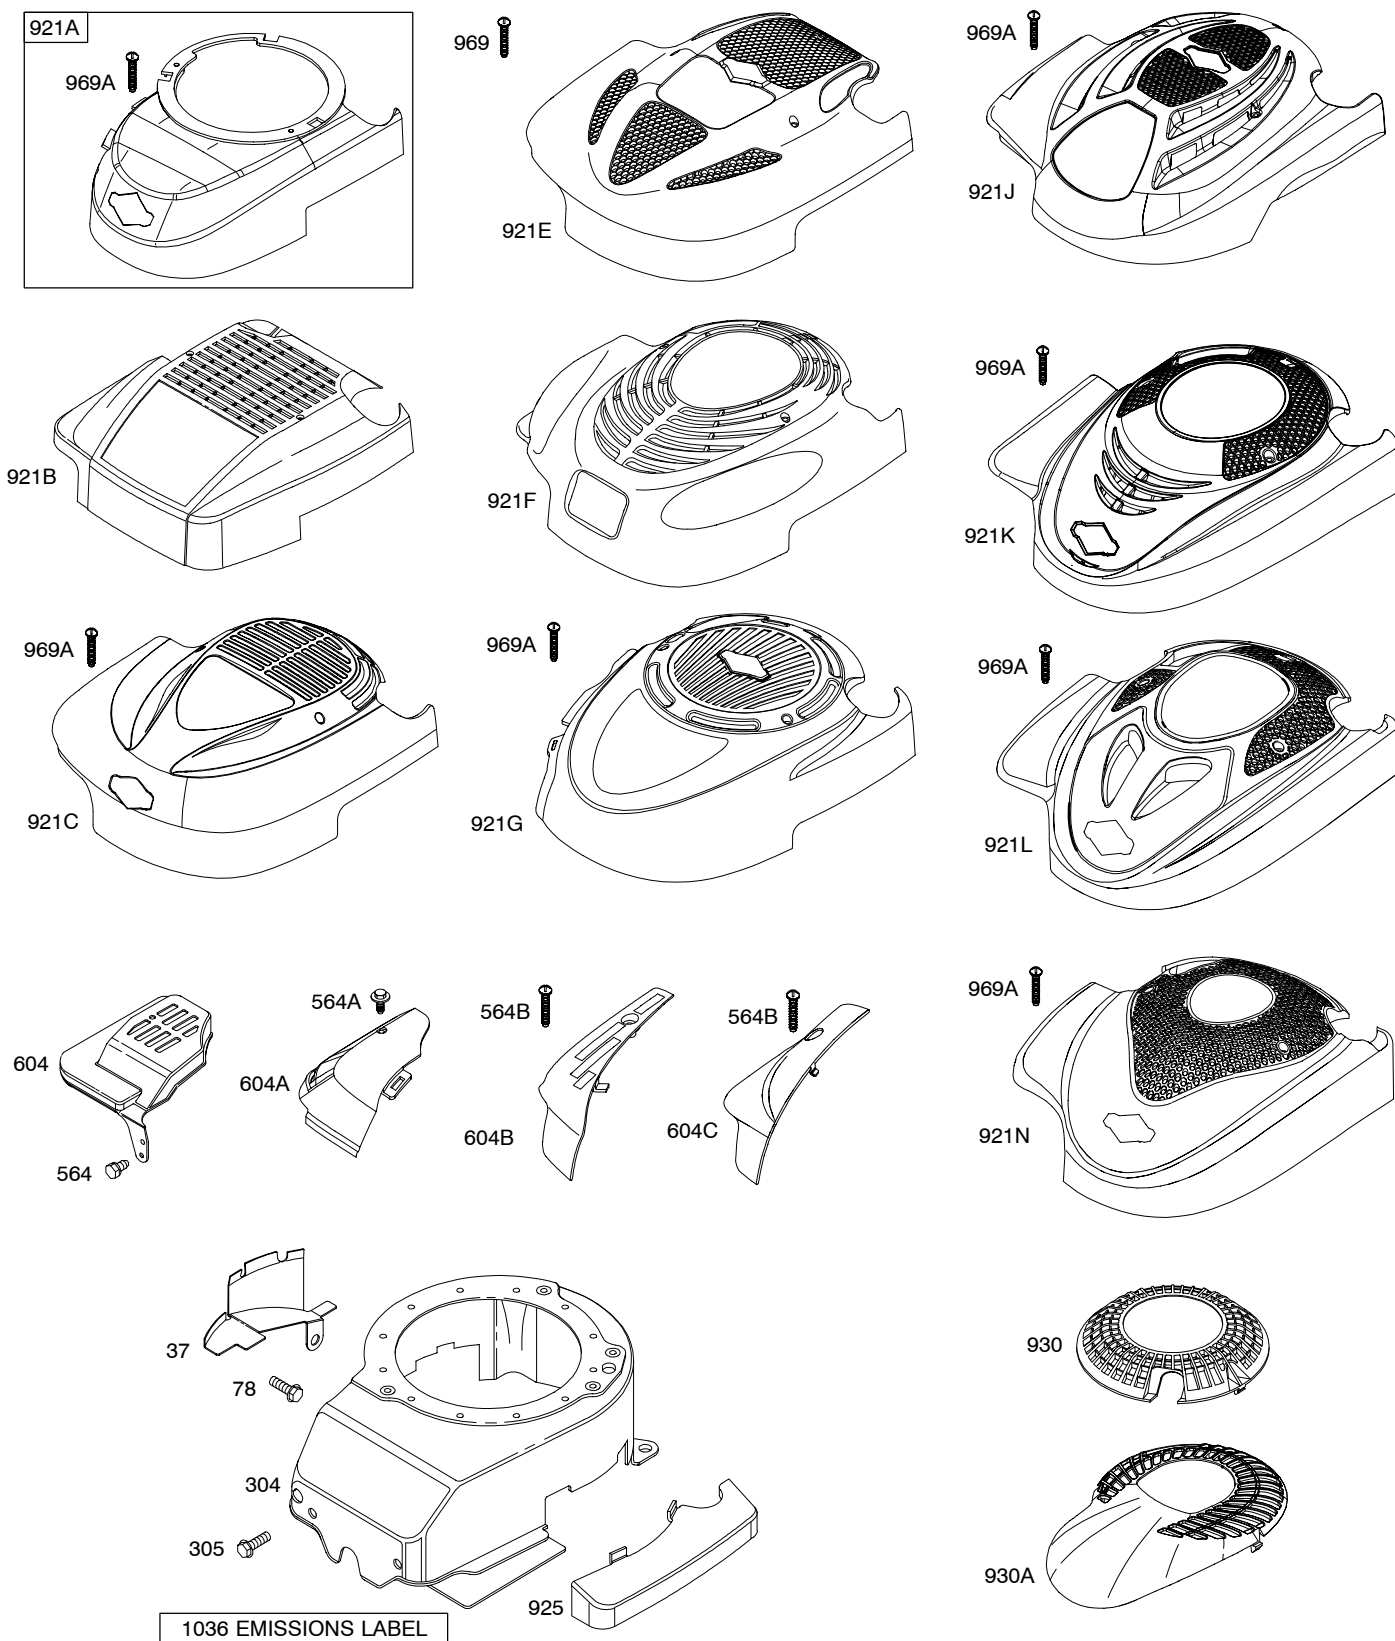

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

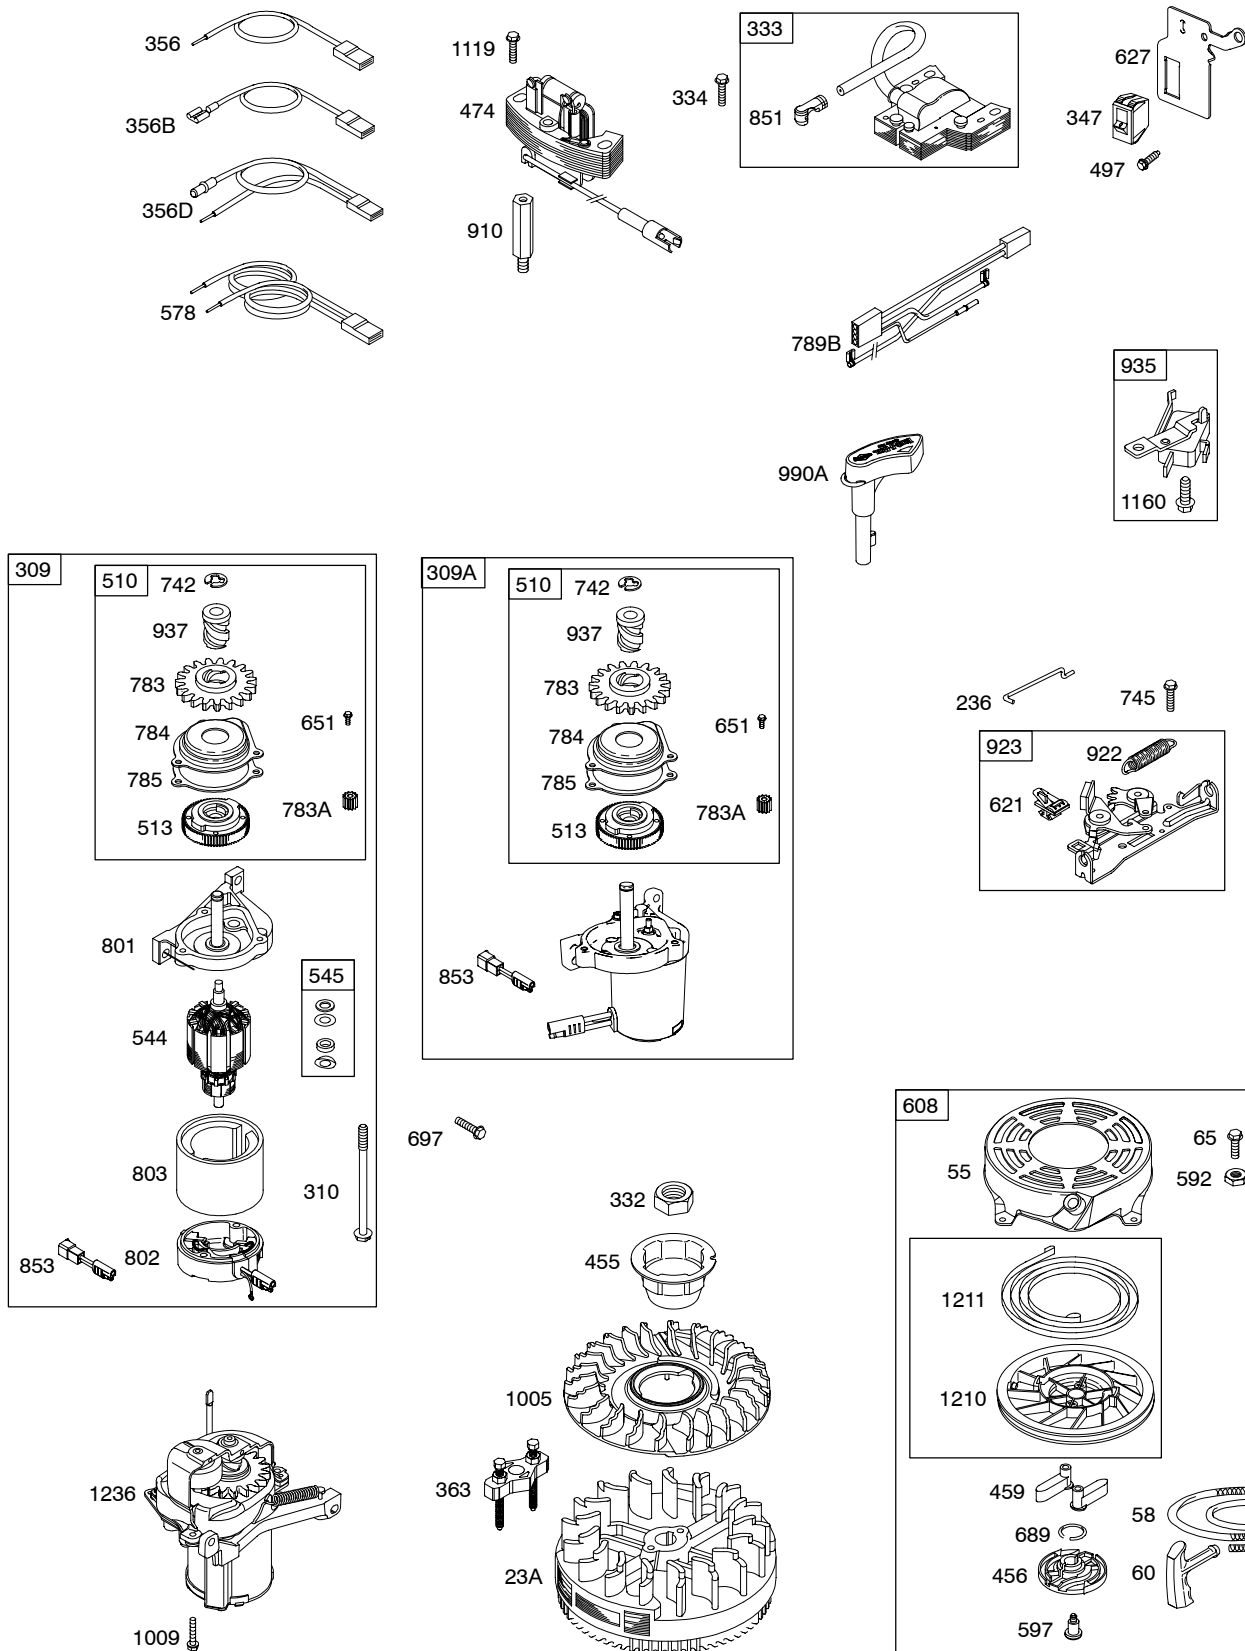

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691450	Crankshaft	22	691092	Screw
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			(Crankcase Cover/ Sump)
3	★299819S	Seal-Oil (Magneto Side)		691451	Crankshaft	23A	691987	Flywheel
4	493279	Sump-Engine			Used on Type No(s).			----- Note -----
		----- Note -----			0015, 0060, 0062,		691992	Flywheel
		696294 Sump-Engine			0107, 0116, 0117,			Used on Type No(s).
		Used on Type No(s).			0120, 0121, 0127,			0005, 0113, 0130,
		0121, 0194, 0244.			0139, 0145, 0147,			0131, 0132, 0134,
		498983 Sump-Engine			0181, 0183, 0184,			0137, 0138, 0156,
		Used on Type No(s).			0185, 0193, 0194,			0236, 0238, 0269,
		0131, 0134, 0138.			0195, 0196, 0197,			0509.
5	691160	Head-Cylinder			0208, 0209, 0210,		696291	Flywheel
7	★Ø692249	Gasket-Cylinder Head			0217, 0218, 0222,			Used on Type No(s).
8	695250	Breather Assembly			0223, 0224, 0225,			0121, 0194, 0244.
9	★Ø696125	Gasket-Breather			0226, 0230, 0231,	24	222698S	Key-Flywheel
10	691125	Screw			0232, 0235, 0237,	25	795429	Piston Assembly
		(Breather Assembly)			0239, 0244, 0261,			(Standard)
11	691781	Tube-Breather			0266, 0271, 0273,			(Used After Code Date
12	★692232	Gasket-Crankcase			0277, 0283, 0307,			07090300).
13	690912	Screw			0336, 0515, 0560,			----- Note -----
		(Cylinder Head)			0615.		791097	Piston
15	691680	Plug-Oil Drain (Square Socket)			696009 Crankshaft			Assembly
					Used on Type No(s).			(Standard)
					0114.			(Used Before Code
					691455 Crankshaft			Date 07090400).
					Used on Type No(s).		795430	Piston
					0018, 0126, 0131,			Assembly
					0134, 0138, 0219,			(.020" Oversize)
					0230, 0234, 0238,			(Used After Code Date
					0243, 0289, 0518.			07090300).
					694849 Crankshaft		791326	Piston
					Used on Type No(s).			Assembly
					0005, 0137, 0156,			(.020" Oversize)
					0236, 0269.			(Used After Code Date
					694478 Crankshaft			04102100 and Before
					Used on Type No(s).			Code Date 07040400).
					0240, 0332.		697341	Piston
					696290 Crankshaft			Assembly
					Used on Type No(s).			(.020" Oversize)
					0113, 0130.			(Used Before Code
					694850 Crankshaft			Date 04102200).
					Used on Type No(s).			(.010" Oversize)
					0132, 0509.			
			20	★399781S	Seal-Oil (PTO Side)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-7

Assemblies include all parts shown in frames.

12/10/2007

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	795431	Ring Set (Standard) (Used After Code Date 07090300). ----- Note ----- 791098 Ring Set (Standard) (Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard) (Used Before Code Date 04031500). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200).	50	497465	Manifold-Intake	117	498978	Jet-Main (Standard) ----- Note ----- 494870 Jet-Main (Standard) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.
28	499423	Pin-Piston (Standard)	51	★272199S	Gasket-Intake	117A	498978	Jet-Main (Standard) ----- Note ----- 498981 Jet-Main (Standard) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
29	499424	Rod-Connecting (Standard)	54	691650	Screw (Intake Manifold)	117B	697355	Jet-Main (Standard)
32	691664	Screw (Connecting Rod)	55	691421	Housing-Rewind Starter	118	497466	Jet-Main (High Altitude) ----- Note ----- 497315 Jet-Main (High Altitude) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.
32A	695759	Screw (Connecting Rod)	58	697316	Rope-Starter (Cut To Required Length)	118A	497466	Jet-Main (High Altitude) ----- Note ----- 494870 Jet-Main (High Altitude) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
33	262651S	Valve-Exhaust	60	281434S	Grip-Starter Rope	118B	692677	Jet-Main (High Altitude)
34	262652S	Valve-Intake	65	690837	Screw (Rewind Starter)			
35	691270	Spring-Valve (Intake)	78	691108	Screw (Flywheel Guard)			
36	691270	Spring-Valve (Exhaust)	81	691740	Lock-Muffler Screw			
37	694086	Guard-Flywheel	95	691636	Screw (Throttle Valve)			
40	692194	Retainer-Valve	97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)			
43	691997	Slinger-Governor/Oil	104	●691242	Pin-Float Hinge			
45	690548	Tappet-Valve	108	691182	Valve-Choke			
46	691449	Camshaft	108A	790844	Valve-Choke			
			109A	498593	Shaft-Choke			
			109B	790843	Shaft-Choke			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-8

Assemblies include all parts shown in frames.

12/10/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	498260	Kit-Carburetor Overhaul	188	693399	Screw (Control Bracket)	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)
125	498170	Carburetor (Primer System)	190	690940	Screw (Fuel Tank)	222C	692150	Bracket-Control (Variable Speed) (5 Postion Manual Choke)
		----- Note -----	202	691829	Link-Mechanical Governor	222E	692982	Bracket-Control (Manual Friction, 5 Postion Manual Choke)
		790821 Carburetor (Primer System)	209B	699056	Spring-Governor	222D	692467	Bracket-Control (Fixed Speed)
		Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 3717.			----- Note -----			791128 Bracket-Control (Fixed Speed)
125A	499059	Carburetor (Choke System)			691292 Spring-Governor			Used on Type No(s). 0145, 0154, 0478, 0479, 0481, 0576, 0582, 0587, 0589, 0592, 0609, 0611, 0613, 0618, 0630, 0631, 0639, 0657, 0664, 0665, 0666, 0674, 0717, 3717.
		----- Note -----			Used on Type No(s). 0114, 0116, 0117, 0125, 0237, 0243, 0277, 0301, 0302, 0307, 0311, 0337, 0338, 0347, 0424, 0425, 0438, 0440, 0484, 0490, 0511, 0513.			----- Note -----
		792253 Carburetor (Choke System)			691851 Spring-Governor			791128 Bracket-Control (Fixed Speed)
		Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.			Used on Type No(s). 0119, 0122, 0123, 0124, 0135, 0141, 0153, 0154, 0156.			Used on Type No(s). 0145, 0154, 0478, 0479, 0481, 0576, 0582, 0587, 0589, 0592, 0609, 0611, 0613, 0618, 0630, 0631, 0639, 0657, 0664, 0665, 0666, 0674, 0717, 3717.
125B	790845	Carburetor (Autochoke System)			691852 Spring-Governor	227	690783	Lever-Governor Control
127	694468	Plug-Welch			Used on Type No(s). 0121, 0142.	231	691636	Screw (Choke Valve)
130	696564	Valve-Throttle			691290 Spring-Governor	236	691826	Link-Lockout
130A	691203	Valve-Throttle			Used on Type No(s). 0005, 0134, 0138, 0145, 0236, 0269.	240	298090S	Filter-Fuel
133	398187	Float-Carburetor			691291 Spring-Governor	265	690798	Clamp-Casing
134	398188	Kit-Needle/Seat			Used on Type No(s). 0113, 0126, 0130, 0131, 0132, 0137, 0240, 0332, 0509.	267	691044	Screw (Casing Clamp)
137	693981	Gasket-Float Bowl			790944 Spring-Governor	268	691025	Casing-Control Wire (Cut to Required Length)
146	690979	Key-Timing			Used on Type No(s). 0238.	269	691026	Wire-Control (Cut to Required Length)
159	691753	Bracket-Air Cleaner Primer				270	691027	Nut (Control Wire Casing)
163	272653	Gasket-Air Cleaner						
187	791766	Line-Fuel (Cut to Required Length)						
187A	791873	Line-Fuel (Molded)						
187B	791891	Line-Fuel (Includes Filter) (Used After Code Date 05063000).						
		----- Note -----						
		692042 Line-Fuel (Includes Filter) (Used Before Code Date 05070100).						
187C	791875	Line-Fuel (Molded)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
271	691028	Lever-Control	304	695892	Housing-Blower	307	690345	Screw
276 ♦	271716	Washer-Sealing (Main Jet)			----- Note -----	309	695550	Motor-Starter (Used Before Code Date 07052900).
287	690940	Screw (Dipstick Tube)			493293 Housing- Blower	309A	795092	Motor-Starter (Used After Code Date 07052800). (Cylinder Shield)
291	790830	Thermostat			Used on Type No(s). 0015, 0018, 0025, 0060, 0062, 0107, 0113, 0114, 0117, 0120, 0127, 0130, 0131, 0132, 0134, 0138, 0147, 0153, 0184, 0210, 0218, 0223, 0225, 0302, 0330, 0515, 0518, 0525, 0560, 0562, 0587, 0589, 0611, 0717, 3717.	310	692327	Bolt (Starter Motor)
300	692038	Muffler			493294 Housing- Blower	332	690662	Nut (Flywheel)
		----- Note -----			Used on Type No(s). 0005, 0126, 0134, 0137, 0156, 0236, 0238, 0240, 0269, 0332, 0509.	333	802574	Armature-Magneto ----- Note -----
		790828 Muffler Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674.			696298 Housing- Blower			790817 Armature- Magneto Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0615, 0625, 0666, 0717, 3717.
300B	694048	Muffler (Super Lo Tone Catalyst)			Used on Type No(s). 0121, 0194, 0244.	334	691061	Screw (Magneto Armature)
					790826 Housing- Blower	337	802592S	Plug-Spark (Resistor) ----- Note -----
					Used on Type No(s). 0479, 0481, 0592, 0615, 0625, 0630, 0664, 0665.			697451 Plug-Spark (EMS)
					790983 Housing- Blower	347	691396	Switch-Rocker
					Used on Type No(s). 0478, 0674.	356	692390	Wire-Stop
					694092 Housing- Blower	356B	693010	Wire-Stop
					Used on Type No(s). 0145.	356D	496381	Wire-Stop
			305	691108	Screw (Blower Housing)	358	497316	Gasket Set-Engine
			306	690450	Shield-Cylinder	363	19069	Flywheel Puller
			306A	790836	Shield-Cylinder	365	691688	Screw (Carburetor)
						383	89838S	Wrench-Spark Plug
						404	690272	Washer (Governor Crank)
						425A	690670	Screw (Air Cleaner Cover)
						443A	692523	Screw (Air Cleaner Primer Base)
						445A	491588S	Filter-Air Cleaner Cartridge

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

♦ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-10

Assemblies include all parts shown in frames.

12/10/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
455	791960	Cup-Flywheel	613	691340	Screw (Muffler)	689	691855	Spring-Friction
456	692299	Plate-Pawl Friction				692	690572	Spring-Detent
459	281505S	Plate-Ratchet			----- Note -----	697	691127	Screw (Drive Cap)
467	790842	Knob-Air Cleaner			790833 Screw	718	690959	Pin-Locating
474	691991	Alternator			(Muffler)	741	794388	Gear-Timing (Use Without Woodruff Key)
497	690664	Screw (Stopswitch Bracket)			Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674.			(Used After Code Date 07093000).
505	691251	Nut (Governor Control Lever)	613B	691114	Screw (Muffler)			----- Note -----
510	795093	Drive-Starter						790345 Gear-Timing (Use Without Woodruff Key)
513	692358	Clutch-Drive	615	690340	Retainer-Governor Shaft			(Used Before Code Date 07100100).
523	499621	Dipstick	616	698801	Crank-Governor			691830 Gear-Timing (Uses Woodruff Key)
524	★692296	Seal-Dipstick Tube	617★◆	270344	Seal-O Ring (Intake Manifold)			
525	495265	Tube-Dipstick	621	692310	Switch-Stop	742	93941	Retainer-E Ring
529	691923	Grommet	627	692872	Bracket-Stopswitch ----- Note -----	745	691648	Screw (Brake)
544	690786	Armature-Starter			792565 Bracket-Stop Switch	783	691918	Gear-Pinion
545	492919	Washer Set			Used on Type No(s). 0156, 0238, 0509.	783A	691269	Gear-Pinion
562	92613	Bolt (Governor Control Lever)	633 ◆◆	691321	Seal-Choke/Throttle Shaft	784	795095	Cover-Starter Gear
564	690664	Screw (Control Cover)	633A ◆◆	693867	Seal-Choke/Throttle Shaft	785	692352	Gasket-Starter Cover
564A	691142	Screw (Control Cover)				789B	696547	Harness-Wiring
564B	698589	Screw (Control Cover)	635	66538S	Boot-Spark Plug	801	690782	Cap-Drive
578	398153	Wire Assembly	651	691660	Screw (Starter Gear Cover)	802	695267	Cap-End
584	697734	Cover-Breather Passage	668	★493823	Spacer	803	695266	Housing-Starter
585	★691879	Gasket-Breather Passage	670	692294	Spacer-Fuel Tank	832	499034	Guard-Muffler
592	690800	Nut (Rewind Starter)	676	396548	Deflector-Muffler (Louvered)	832B	497683	Guard-Muffler (Super Lo Tone Catalyst)
597	691696	Screw (Pawl Friction Plate)	676C	493871	Deflector-Muffler (Side Out) (Extended)	836	690664	Screw (Muffler Guard)
601	791850	Clamp-Hose				836B	691147	Screw (Muffler Guard)
601A	691038	Clamp-Hose	677	690661	Screw (Muffler Deflector)	842	★691031	Seal-O Ring (Dipstick Tube)
604	691757	Cover-Control	684	690345	Screw (Breather Passage Cover)	843	691884	Sleeve-Lever (Control Bracket)
604A	691344	Cover-Control				843A	691895	Sleeve-Lever (Choke)
604B	790703	Cover-Control						
604C	792418	Cover-Control						
608	497680	Starter-Rewind						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
847	692047	Dipstick/Tube Assembly	922	691831	Spring-Brake	923	691994	Brake
851	493880S	Terminal-Spark Plug			----- Note -----			----- Note -----
853	695268	Adapter-Wire		692135	Spring-Brake		695891	Brake
868	697338	Seal-Valve			Used on Type No(s).			Used on Type No(s).
869	691155	Seat-Valve (Intake)			0101, 0116, 0119,			0101, 0116, 0119,
					0122, 0123, 0124,			0122, 0123, 0124,
870	690380	Seat-Valve (Exhaust)			0125, 0135, 0139,			0125, 0135, 0139,
					0141, 0142, 0154,			0141, 0142, 0154,
871	262001	Bushing-Valve Guide (Exhaust)			0181, 0183, 0185,			0181, 0183, 0185,
		----- Note -----			0193, 0195, 0196,			0193, 0195, 0196,
		63709 Bushing-Valve Guide (Intake)			0197, 0208, 0209,			0197, 0208, 0209,
					0217, 0219, 0222,			0217, 0219, 0222,
883 ★	691881	Gasket-Exhaust			0224, 0226, 0230,			0224, 0226, 0230,
910	691094	Stud (Alternator)			0231, 0232, 0234,			0231, 0232, 0234,
					0235, 0237, 0239,			0235, 0237, 0239,
921A	695886	Cover-Blower Housing			0243, 0258, 0261,			0243, 0258, 0261,
921B	692931	Cover-Blower Housing			0266, 0267, 0268,			0266, 0267, 0268,
921C	695889	Cover-Blower Housing			0271, 0277, 0281,			0271, 0277, 0281,
921E	696262	Cover-Blower Housing			0283, 0289, 0301,			0283, 0289, 0301,
921F	697343	Cover-Blower Housing			0306, 0307, 0309,			0306, 0307, 0309,
921G	790701	Cover-Blower Housing			0311, 0312, 0313,			0311, 0312, 0313,
921J	790036	Cover-Blower Housing			0314, 0315, 0324,			0314, 0315, 0324,
921K	699984	Cover-Blower Housing			0326, 0327, 0328,			0326, 0327, 0328,
921L	791026	Cover-Blower Housing			0329, 0336, 0337,			0329, 0336, 0337,
921N	792675	Cover-Blower Housing			0338, 0347, 0350,			0338, 0347, 0350,
					0357, 0424, 0425,			0357, 0424, 0425,
					0438, 0440, 0444,			0438, 0440, 0444,
					0447, 0450, 0454,			0447, 0450, 0454,
					0456, 0479, 0481,			0456, 0479, 0481,
					0484, 0490, 0498,			0484, 0490, 0498,
					0501, 0507, 0508,			0501, 0507, 0508,
					0511, 0513, 0541,			0511, 0513, 0541,
					0547, 0563, 0564,			0547, 0563, 0564,
					0576, 0582, 0592,			0576, 0582, 0592,
					0609, 0613, 0615,			0609, 0613, 0615,
					0618, 0625, 0630,			0618, 0625, 0630,
					0631, 0639, 0657,			0631, 0639, 0657,
					0664, 0665, 0666.			0664, 0665, 0666.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5054-12

Assemblies include all parts shown in frames.

12/10/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
925	795403	Cover-Linkage (Used After Code Date 07072200). ----- Note ----- 690595 Cover- Linkage (Used Before Code Date 07072300).	972	699392	Tank-Fuel (Plastic)	1059	692311	Kit-Screw/Washer ----- Note -----
			972B	699374	Tank-Fuel (Plastic) ----- Note ----- 699387 Tank-Fuel (Plastic) Used on Type No(s). 0121, 0194, 0244.		696293	Kit-Screw/ Washer (Touch N Mow)
930	691919	Guard-Rewind (Round)				1095	498528	Gasket Set-Valve
930A	691345	Guard-Rewind (Tear Drop)	975	493640	Bowl-Float	1119	692979	Screw (Alternator)
935	499421	Switch-Interlock	976	694395	Primer-Carburetor	1160	690345	Screw (Interlock Switch)
937	691325	Spline-Starter	977	498261	Gasket Set-Carburetor	1210	498144	Pulley/Spring Assembly (Pulley)
957A	692046	Cap-Fuel Tank (Plastic)	990A	695951	Key Set	1211	498144	Pulley/Spring Assembly (Spring)
957B	699985	Cap-Fuel Tank (Plastic)	1005	691346	Fan-Flywheel	1236	695959	Starter-Machanical (Touch N Mow) (Do Not Service Individual Parts, Only As A Whole)
966A	496116	Base-Air Cleaner Primer	1009	696255	Screw (Starter Motor)			
966B	792040	Base-Air Cleaner Primer	1019	494256	Kit-Label ----- Note ----- 790231 Kit-Label (Touch N Mow)	1319	794467	Label-Warning
967A	493537S	Filter-Pre Cleaner	1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)	1330	270962	Manual-Repair
968B	692298	Cover-Air Cleaner				1386	790848	Vane-Air (Autochoke System)
969	690700	Screw (Blower Housing Cover)	1058	277039	Operator's Manual ----- Note ----- 277101 Operator's Manual (Touch N Mow)	1387	790849	Spring-Air Vane
969A	691138	Screw (Blower Housing Cover)				1388	790850	Screw (Air Vane)
970	691669	Screw (Air Cleaner Primer Bracket)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.